

 


BOSWELL

GENUINE PARTS



FUEL INJECTION PUMP ASSY
WITHOUT SOLENOID

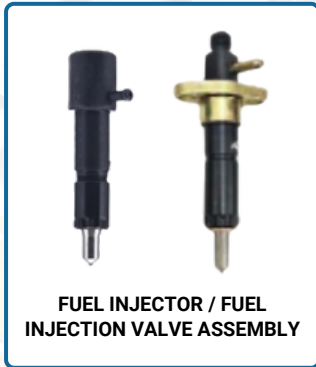

FUEL INJECTOR / FUEL
INJECTION VALVE ASSEMBLY



NOZZLE TIP



OIL DIPSTICK



FUEL TANK FILTER
SCREEN STRAINER



 
SEAL PLATE GASKET



AIR CLEANER ASSEMBLY OR
AIR FILTER ASSEMBLY



AIR CLEANER ELEMENT OR
AIR FILTER ELEMENT

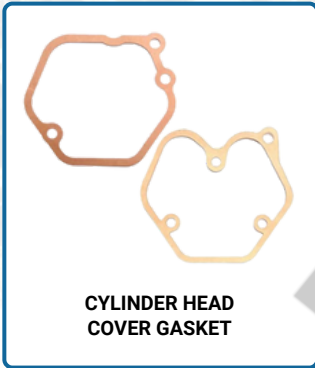


CYLINDER HEAD
COVER GASKET



MUFFLER GASKET FOR
DIESEL ENGINE



 MUFFLER GASKET FOR
DIESEL GENERATOR

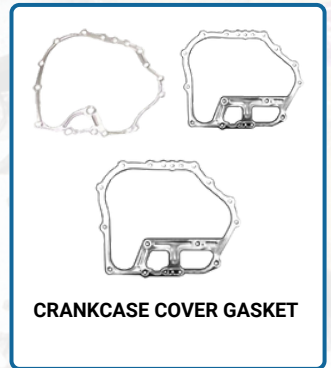

CRANKCASE COVER GASKET



HIGH PRESSURE FUEL PIPE



 
RECOIL STARTER



SPARK PLUG




CARBURETOR FOR
BRUSH CUTTER

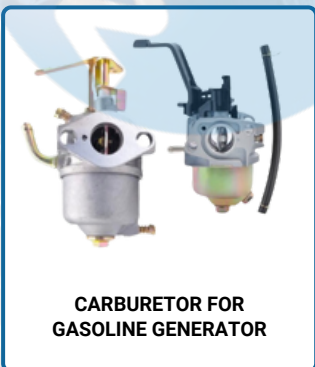

CARBURETOR FOR
GASOLINE GENERATOR



AVR

 [CONTACT US](#)



ADAPTOR
(DEEP WELL & SHALLOW PUMP)



VERTICAL & HORIZONTAL ADAPTOR



C.I. EJECTOR



C.I. TWIN PIPE EJECTOR



BRASS EJECTOR



BRASS TWIN PIPE EJECTOR



SEAPUMP PRESSURE SWITCH



SUNNY PRESSURE SWITCH



C.I. TWIN PIPE EJECTOR



GOULDS IMPELLER



DIAPHRAGM



FLUID LEVEL CONTROL



 
SUNNY PRESSURE SWITCH



LEVEL CONTROL



GOULDS CENTRIFUGAL SWITCH

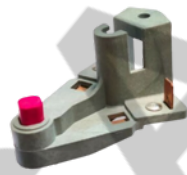

GOULDS V-SWITCH GREY NEW MODEL



FLOAT SWITCH



MYERS CENTRIFUGAL SWITCH



 
MYERS GOVERNOR SWITCH



MINDONG CENTRIFUGAL SWITCH BOARD/BASE



MINDONG CENTRIFUGAL SWITCH HEAD

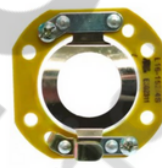

SUBMERSIBLE CENTRIFUGAL SWITCH



AIR VOLUME CONTROL SWITCH



BRASS CONNECTOR



CAP SEAL



CONICAL SEAL



MECHANICAL SEAL



SUBMERSIBLE SEAL



DRE STARTING CAPACITOR SOCKET TYPE (UF)



DRE RUNNING CAPACITOR SOCKET TYPE (UF)



SKC AC RUNNING CAPACITOR SOCKET TYPE (UF)



SEAPUMP RUNNING CAPACITOR-SOCKET TYPE (UF)



SEAPUMP RUNNING CAPACITOR-WIRE TYPE (UF)



SEAPUMP RUNNING CAPACITOR-SQUARE TYPE (UF)



MINDONG STARTING CAPACITOR-SOCKET TYPE (UF)



MINDONG STARTING CAPACITOR-WIRE TYPE (UF)



MINDONG RUNNING CAPACITOR WIRE TYPE WHITE (UF)



MINDONG RUNNING CAPACITOR WIRE TYPE WHITE (UF)



UNION STARTING CAPACITOR SOCKET TYPE (UF)